
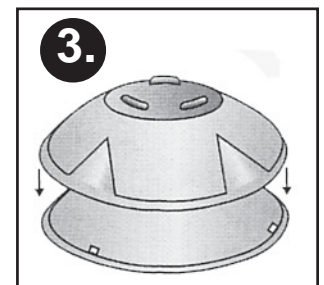
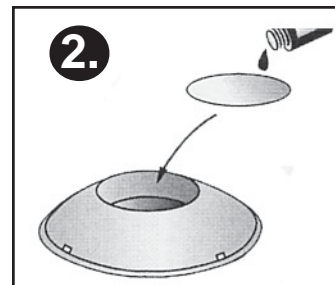


Insect Monitoring Kit Assembly Instructions

For: STGB, MGB and other small beetles

TRAP ASSEMBLY INSTRUCTIONS

1. Remove components from carton. Each carton includes:
 - A. trap/catch reservoirs (5)
 - B. dome covers (5)
 - C. absorbent pads (10)
 - D. oil-based food (kairomone) attractant container (1)
2. Place an absorbent pad in the bottom of the catch reservoir. (Five additional pads are included for use when renewing the oil bait bi-weekly.) Saturate (avoid excess) the pad with oil from the oil-filled container. The kit contains enough oil to recharge each trap four times. Do not discard used oil containers within storage facility.
Note: Make sure to keep oil off the sides of the catch reservoir. Wipe off any oil before continuing.
3. Align projections on dome cover with indents on base and snap the two parts together. When handling trap, grasp the indents in the cover tightly with your fingers. Trap is now ready for placement.

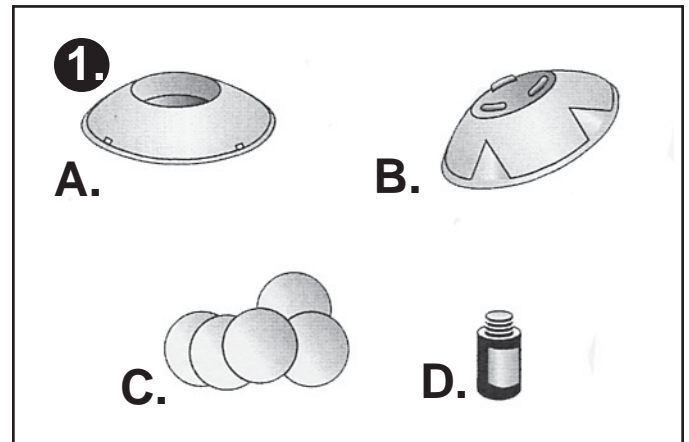

Distributed by:
Great Lakes IPM, Inc.
10220 E. Church Rd.
Vestaburg, MI 48891

800-235-0285
989-268-5693
FAX: 989-268-5311

www.greatlakesipm.com
E-mail: glimp@greatlakesipm.com